


TIME TUTELARY

Instruction Manual


- Thank you for purchasing this great product.
- Please take a few moments to read through the manual to ensure proper operation.
- Please keep the instruction manual for future reference.

ITEM NO. KA073

The switch and the Adaptor port can be found at the rear side of the unit.

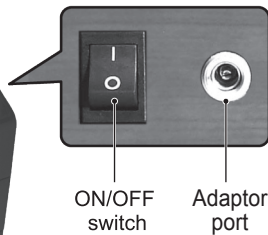

ON/OFF switch Adaptor port

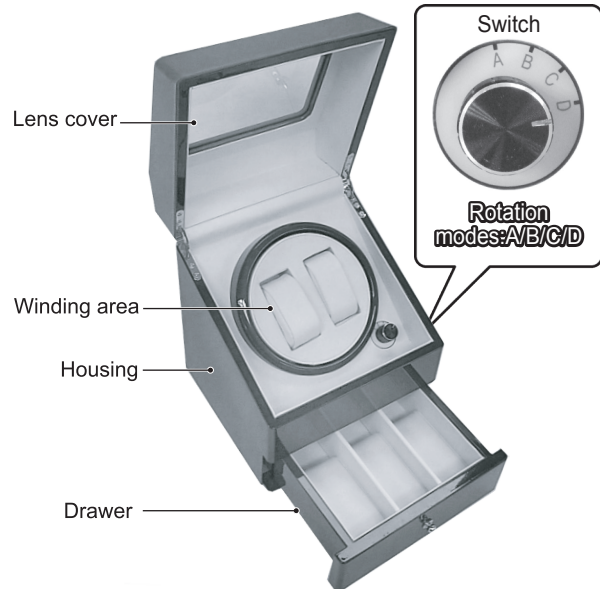

Item specification

Power	Input : AC/100~240V, 50~60Hz; Output : DC/4V 500mA		
Feature	A. Four watch winding modes: A / B / C / D. Each mode performs a different winding sequence (described below). B. Two watches can be wound at the same time. C. The AC outlet port can be found at the back of the Watch-Winder. D. Suitable for operating in temperatures between 5°C (41°F) and 40°C (104°F).		
Size	185 X178 X216mm(LxWxH)		
Weight	About 1.6 Kgs	Accessory	AC Adaptor

Note:

- Please use the AC Adaptor 4V 500mA supplied with the unit.
- Remove the adaptor when the winder is not in use.
- Always turn off the power when inserting or removing watches.
- Do not move the Watch-Winder while the unit is in use.



Operation:

- * Insert the AC Adaptor provided into the socket located at the back of the Watch-Winder before inserting plug into the power outlet.
- * Open the cover at the front of the Watch-Winder .
Gently pull out the watch holder, using your forefinger and thumb.
- * Place the watch on the watch holder. Set the watch holder onto the Watch-Winder, then close the cover.
- * The "On/ Off " switches are located at the back of the Watch-Winder. Flip the switch to the "On" position for the watch-holder in use.
- * The "Rotation Mode" switches are located at the front of the Watch-Winder. Turn the "Rotation Mode" switch to the required mode - either A / B / C / D. The mode cycles are described below.
- * The watch-holder should now start to revolve.
 - Mode A:** Revolves clockwise for 6 minutes - stops for 30 minutes - the Watch-Winder will repeat this cycle until stopped.
 - Mode B:** Revolves anticlockwise for 6 minutes - stops for 30 minutes - the Watch-Winder will repeat this cycle until stopped.
 - Mode C:** Revolves clockwise for 20 minutes - stops for 10 minutes - then revolves anticlockwise for 20 minutes stops for 10 minutes - the Watch-Winder will repeat this cycle until stopped.
 - Mode D:** Revolves clockwise for 10 minutes - then anticlockwise for 10 minutes - then clockwise for 10 minutes. The Watch-Winder will repeat this cycle for 3 hours - then stop completely for 9 hours - the Watch-Winder will repeat this cycle until stopped.

Attention:

- * Please remove the AC Adaptor when the Watch-Winder is not in use.
- * Do not place or remove a watch on the watch holder while it is moving.
- * Please dispose of this product responsibly at an approved disposal site or recycling facility.
Do not dispose of this product in normal household waste.

